



FD Trinitron  
**WEGA**

---

***Trinitron® Color TV***

Operating Instructions

*KV-13FM12*

*KV-13FM13*

*KV-13FM14*

*KV-20FS12*



# WARNING

To reduce the risk of fire or electric shock, do not expose the TV to rain or moisture.



This symbol is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

## Note to the CATV Installer

This reminder is provided to call the CATV system installer’s attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.

## SAFETY PRECAUTIONS

- ☐ Operate the TV only on 120 V AC.
- ☐ One blade of the power plug is wider than the other for safety purposes and will fit into the power outlet only one way. If you are unable to insert the plug fully into the outlet, contact your dealer.
- ☐ If any liquid or solid object falls into the TV, unplug it and have it checked by qualified personnel before operating it further.

## CAUTION

When using TV games, computers, and similar products with your TV, keep the brightness and contrast functions at low settings. If a fixed (non-moving) pattern is left on the screen for long periods of time at a high brightness or contrast setting, the image can be permanently imprinted onto the screen. Continuously watching the same channel can cause the imprint of station logos onto the TV screen. These types of imprints are not covered by your warranty because they are the results of misuse.



To reduce the risk of electric shock, do not use this polarized plug with an extension cord, receptacle, or other outlet unless the blades can be fully inserted to prevent blade exposure.



You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

## NOTIFICATION

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference with radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antennas.
- ☐ Increase the separation between the equipment and receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ☐ Consult the dealer or an experienced radio/TV technician for help.

## Protecting the TV

- ☐ To prevent internal heat build-up, do not block the ventilation openings.
- ☐ Do not install the TV in a hot or humid place, or in a place subject to excessive dust or mechanical vibration.

## Note on Caption Vision

This television receiver provides display of television closed captioning in accordance with § 15.119 of the FCC rules.

Use of this television for other than private viewing of programs broadcast on UHF or VHF or transmitted by cable companies for the use of the general public may require authorization from the broadcaster-cable company and/or program owner.

## Owner's Record

The model and serial numbers are located on the front cover of this manual and the rear of your TV.

## Trademarks and Copyrights

ENERGY STAR® is a registered mark.



As an ENERGY STAR® Partner, Sony has determined that this product or product model meets the ENERGY STAR® guidelines for energy efficiency.

# Important Safeguards

For your protection, please read these instructions completely, and keep this manual for future reference. Carefully observe and comply with all warnings, cautions and instructions placed on the set, or described in the operating instructions or service manual.

## WARNING

To guard against injury, the following basic safety precautions should be observed in the installation, use, and servicing of the set.

## Use

### Power Sources

This set should be operated only from the type of power source indicated on the serial/model plate. If you are not sure of the type of electrical power supplied to your home, consult your dealer or local power company. For those sets designed to operate from battery power, refer to the operating instructions.



### Grounding or Polarization

This set is equipped with a polarized AC power cord plug (a plug having one blade wider than the other), or with a three-wire grounding type plug (a plug having a third pin for grounding).

Follow the instructions below:

### For the set with a polarized AC power cord plug

 
This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to have a suitable outlet installed. Do not defeat the safety purpose of the polarized plug by forcing it in.



### Alternate Warning


### For the set with a three-wire grounding type AC plug

This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to have a suitable outlet installed. Do not defeat the safety purpose of the grounding plug.



## Overloading

Do not overload wall outlets, extension cords or convenience receptacles beyond their capacity, since this can result in fire or electric shock. Always turn the set off when it is not to be used. When the set is left unattended and unused for long periods of time, unplug it from the wall outlet as a precaution against the possibility of an internal malfunction that could create a fire hazard.

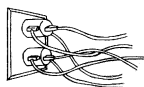

Do not disconnect the antenna or the power cord during a heavy storm. Lightning may strike while you are holding the cable or cord, causing serious injury. Turn off your TV and wait for the weather to improve.


## Object and Liquid Entry

Never push objects of any kind into the set through the cabinet slots as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the set.



## Attachments

Do not use attachments not recommended by the manufacturer, as they may cause hazards.

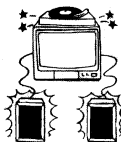

Do not place any objects, especially heavy objects, on top of the set. The object may fall from the set, causing injury.

## Cleaning

Unplug the set from the wall outlet before cleaning or polishing it. Do not use liquid cleaners or aerosol cleaners. Use a cloth lightly dampened with water for cleaning the exterior of the set.



If a snapping or popping sound from a TV set is continuous or frequent while the TV is operating, unplug the TV and consult your dealer or service technician. It is normal for some TV sets to make occasional snapping or popping sounds, particularly when being turned on or off.



## Installation

Always use two or more people to lift or move the set. The set is heavy and the bottom surface is flat. Serious injury can result from trying to move the set by yourself alone, or from unsteady handling. Install the set on a stable, level surface.

## Water and Moisture

Do not use power-line operated sets near water — for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, etc.



## Accessories

Do not place the set on an unstable cart, stand, tripod, bracket, table, or shelf. The set may fall, causing serious injury to a child or an adult, and serious damage to the set. Use only a cart or stand recommended by the manufacturer for the specific model of TV. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.

Disconnect all cables and cords from the set before attempting to move the set.



Do not allow children or pets to climb up onto, or push against, the set. The set may fall, causing serious injury.

 
## Ventilation

The slots and openings in the cabinet and in the back or bottom are provided for necessary ventilation. To ensure reliable operation of the set, and to protect it from overheating, these slots and openings must never be blocked or covered.

- **Never cover the slots and openings with a cloth or other materials.**



- **Never block the slots and openings by placing the set on a bed, sofa, rug or other similar surface.**



- **Never place the set in a confined space, such as a bookcase, or built-in cabinet, unless proper ventilation is provided.**



- **Do not place the set near or over a radiator or heat register, or where it is exposed to direct sunlight.**



## Power-Cord Protection

Do not allow anything to rest on or roll over the power cord, and do not place the set where the power cord is subject to wear or abuse.



## Grounding or Polarization

This set may be equipped with a polarized alternating current line plug (a plug having one blade wider than other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact you electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

## Antennas

### Outdoor Antenna Grounding


If an outdoor antenna is installed, follow the precautions below. An outdoor antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can come in contact with such power lines or circuits.

WHEN INSTALLING AN OUTDOOR ANTENNA SYSTEM, EXTREME CARE SHOULD BE TAKEN TO KEEP FROM CONTACTING SUCH POWER LINES OR CIRCUITS AS CONTACT WITH THEM IS ALMOST INVARIABLY FATAL.

Be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code (NEC) in USA and Section 54 of the Canadian Electrical Code in Canada provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

### Antenna Grounding According to the NEC

Refer to section 54-300 of Canadian Electrical Code for Antenna Grounding.

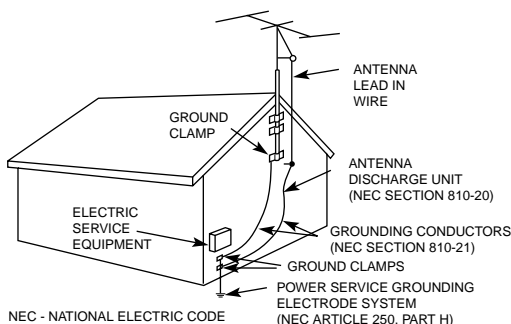

## Lightning

For added protection for this television receiver during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna. This will prevent damage to the receiver due to lightning and power-line surges.

 


## Service

### Damage Requiring Service

Unplug the set from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- **When the power cord or plug is damaged or frayed.**



- **If liquid has been spilled into the set.**



- **If the set has been exposed to rain or water.**



- **If the set has been subject to excessive shock by being dropped, or the cabinet has been damaged.**



- **If the set does not operate normally when following the operating instructions. Adjust only those controls that are specified in the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the set to normal operation.**



- **When the set exhibits a distinct change in performance — this indicates a need for service.**

### Servicing

Do not attempt to service the set yourself since opening the cabinet may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.



### Replacement Parts

When replacement parts are required, be sure the service technician certifies in writing that he has used replacement parts specified by the manufacturer that have the same characteristics as the original parts. Unauthorized substitutions may result in fire, electric shock, or other hazards.



### Safety Check

Upon completion of any service or repairs to the set, ask the service technician to perform routine safety checks (as specified by the manufacturer) to determine that the set is in safe operating condition, and to so certify. When the set reaches the end of its useful life, improper disposal could result in a picture tube implosion. Ask a qualified service technician to dispose of the set.





# Contents

## Introduction

Trinitron® Color TV Features .....	1
Batteries for the Remote Control.....	2
About this Manual .....	2







## Connecting Your TV

Basic Connections.....	3
Connecting Additional Equipment .....	4

## Using the Remote Control and Basic Functions

Using the Remote Control.....	13
Setting Up the TV Automatically.....	14
Quick Start to the Menus.....	15

## Using the Menus

Using the Video  Menu .....	18
Using the Audio  Menu .....	19
Using the Channel Setup  Menu.....	20
Parental Control.....	22
Using the Parental Control  Menu .....	25
Using the Timer  Menu .....	28
Using the Setup  Menu.....	29
Options Menu .....	30

## Other Information

Troubleshooting .....	31
Specifications.....	33

Index.....	35
------------	----



# Introduction

Congratulations on your purchase of the Sony Trinitron® Color TV. Before you begin using this manual, please check the model number located on the rear of your TV or on the front cover of this manual.

## Trinitron® Color TV Features

Some of the features you will enjoy include:


- ❑ **FLAT CRT** — New technologically advanced screen for optimal picture quality.
- ❑ **Parental Control** — A tool for parents to help monitor what their children watch on TV by establishing rating limits.
- ❑ **Favorite Channel** — Instant access to your favorite channels with the touch of a button.
- ❑ **Energy Star®** — A recognized symbol of energy efficiency.
- ❑ **Direct MTS** — Allows direct access to changing your Multi-Channel TV Sound: Stereo, Mono, or Auto-SAP (Second Audio Program), with the touch of a button (KV-20FS12 only).
- ❑ **Trilingual Menus** — Choose between English, French, or Spanish menus.
- ❑ **Front Panel Controls** — Allows access to the on-screen menus without the use of a remote control.
- ❑ **Front A/V inputs** — A quick connection for video games, camcorders, stereo/mono equipment, or headphones.





In this manual, references to the KV-13FM12 include the KV-13FM12, KV-13FM13, and the KV-13FM14 models.

## Batteries for the Remote Control

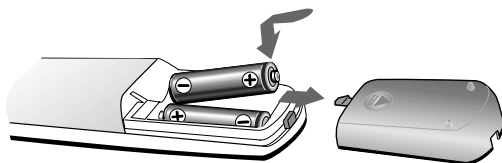Insert two AA (R6) batteries (supplied) into the remote control using the following illustration as a guide.




 Under normal conditions, batteries will last up to six months. If the remote control does not operate properly, the batteries might be worn out.

 If you will not be using the remote control for an extended period of time, remove the batteries to avoid possible damage from battery leakage.

## About this Manual

This manual provides instructions to help you enjoy your new TV. It shows you how to connect to an antenna or cable, cable box, VCR, DVD, satellite receiver, stereo system, or camcorder. Once you're connected, follow the instructions and use the remote control to access the on-screen menus.

 The TV front and rear panels illustrated in this manual are for KV-20FS12. The front and rear panels on your TV may not look exactly like those illustrated.


# Connecting Your TV

Read this section before setting up your TV for the first time. This section covers basic connections in addition to any optional equipment you may be connecting.

## Basic Connections

### TV with indoor or outdoor antenna, or CATV cable


Depending on the cable available in your home, choose one of the connections below:

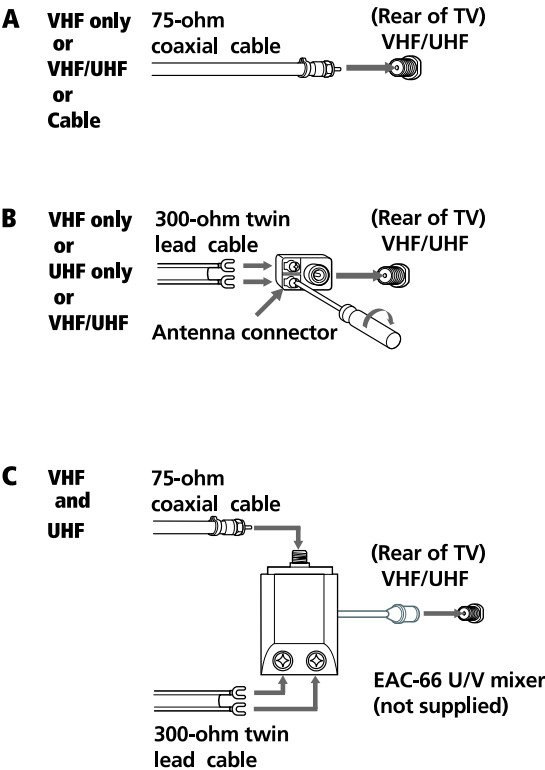

If you are connecting to an indoor or outdoor antenna, you may need to adjust the orientation of the antenna for best reception.

# Connecting Additional Equipment

## TV and VCR

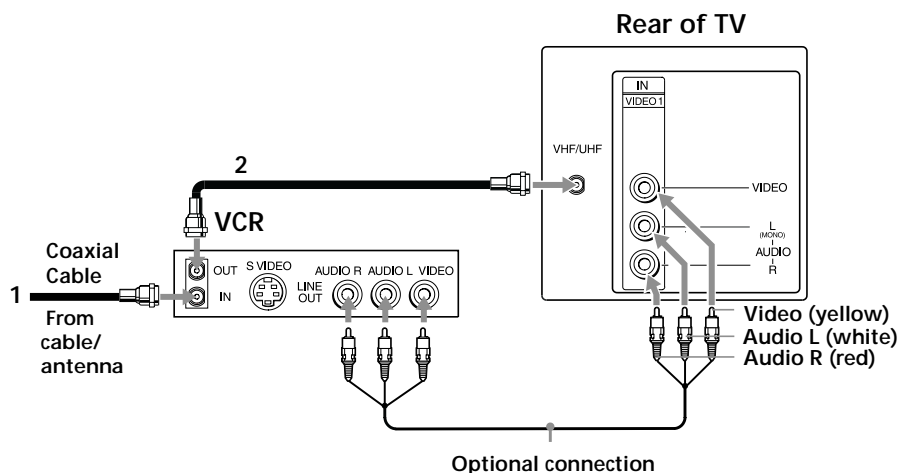

To watch video programs from your VCR, tune your TV to channel 3 or 4 (as set on the rear of your VCR).

- 1** Connect the coaxial cable from your TV antenna or cable service to the IN jack on your VCR.
- 2** Connect a coaxial cable (not supplied) from the OUT jack on your VCR to the VHF/UHF jack on the TV.


### Optional connection

If your VCR is equipped with video outputs, you can get better picture quality by connecting Audio/Video cables (not supplied) from AUDIO and VIDEO OUT on your VCR to AUDIO/VIDEO IN on your TV.


You can use the button to switch between the VHF/UHF and VIDEO inputs.




## TV and Cable Box

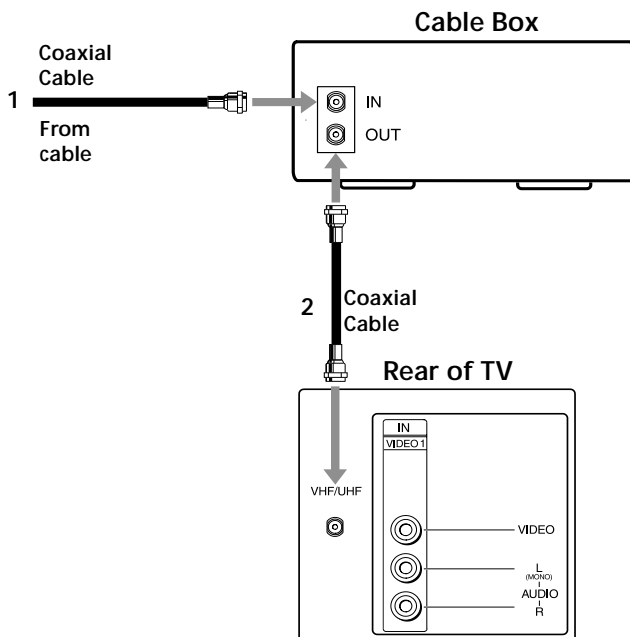


- 1** Connect the coaxial cable from your cable service to the IN jack on your cable box.
- 2** Connect a coaxial cable (not supplied) from the OUT jack on your cable box to the VHF/UHF jack on the TV.

 To view channels from your cable box, tune your TV to channel 3 or 4 (as set on the rear panel of your cable box) and use the cable box's remote control to change channels.

 If you will be controlling all channel selection through your cable box, you should consider using the Channel Fix feature by setting your TV to channel 3 or 4, (see page 20).

## TV, VCR, and Cable Box

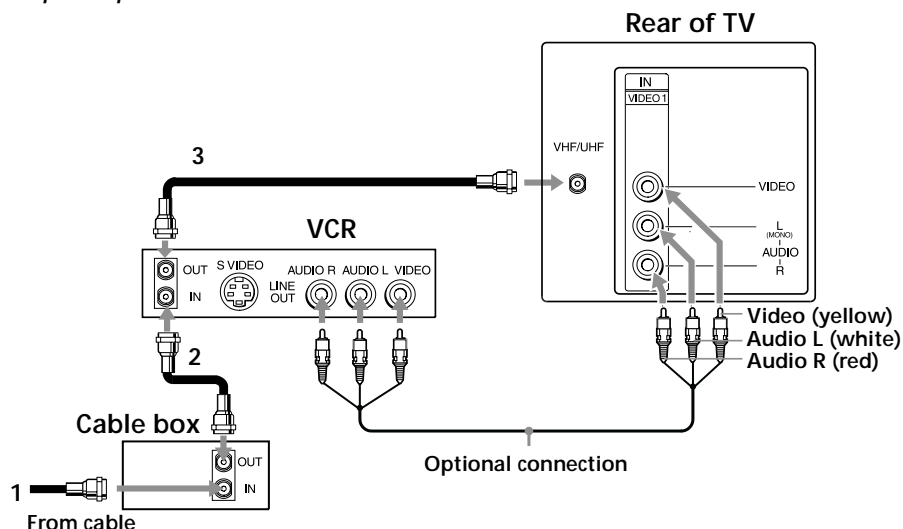

- 1 Connect the coaxial cable from your cable service to the IN jack on your cable box.
- 2 Connect a coaxial cable (not supplied) from the OUT jack on your cable box to the IN jack on your VCR.
- 3 Connect a coaxial cable (not supplied) from the OUT jack on your VCR to the VHF/UHF jack on the TV.


If you will be controlling all channel selection through your cable box, you should consider using the Channel Fix feature by setting your TV to channel 3 or 4, (see page 20).

### Optional connection

If your VCR is equipped with video outputs, you can get better picture quality by connecting Audio/Video cables (not supplied) from AUDIO and VIDEO OUT on your VCR to AUDIO/VIDEO IN on your TV.

You can use the button to switch between the VHF/UHF and VIDEO inputs.

## TV and Satellite Receiver

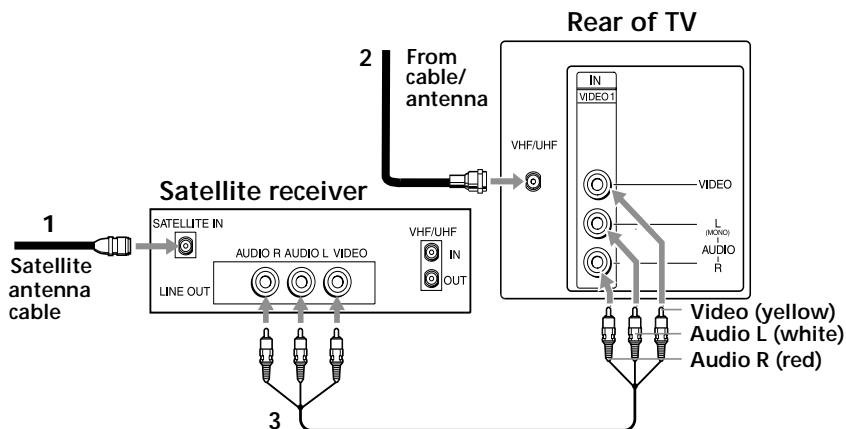


- 1** Connect the cable from your satellite antenna to **SATELLITE IN** on your satellite receiver.
- 2** Connect the coaxial cable from your cable service or antenna to the **VHF/UHF** jack on your TV.
- 3** Using Audio/Video cables (not supplied), connect **AUDIO** and **VIDEO OUT** on your satellite receiver to **AUDIO** and **VIDEO IN** on your TV.



You can use the **TV/VIDEO** button to switch between the **VHF/UHF** and **VIDEO** inputs.

## TV, Satellite Receiver, and VCR

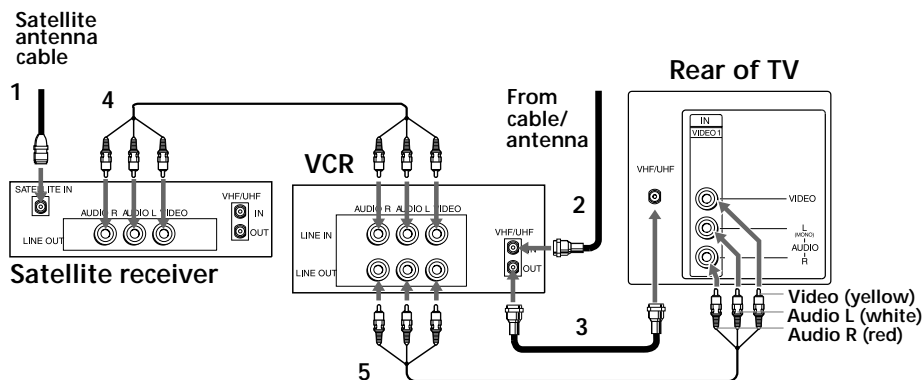


- 1** Connect the cable from your satellite antenna to SATELLITE IN on the satellite receiver.
- 2** Connect the coaxial cable from your cable service or antenna to the IN jack on your VCR.
- 3** Using a coaxial cable (not supplied), connect the OUT jack on your VCR to the VHF/UHF jack on your TV.
- 4** Using Audio/Video cables (not supplied), connect AUDIO and VIDEO OUT on your satellite receiver to AUDIO and VIDEO IN on your VCR.
- 5** Using Audio/Video cables (not supplied), connect AUDIO and VIDEO OUT on your VCR to AUDIO and VIDEO IN on your TV.



To view from the satellite receiver or VCR, select the video input to which your satellite receiver or VCR is connected by pressing **TV/VIDEO** on the remote control.


## Connecting a Camcorder

Using Audio/Video cables (not supplied), connect AUDIO and VIDEO OUT on your camcorder to AUDIO and VIDEO IN on your TV.

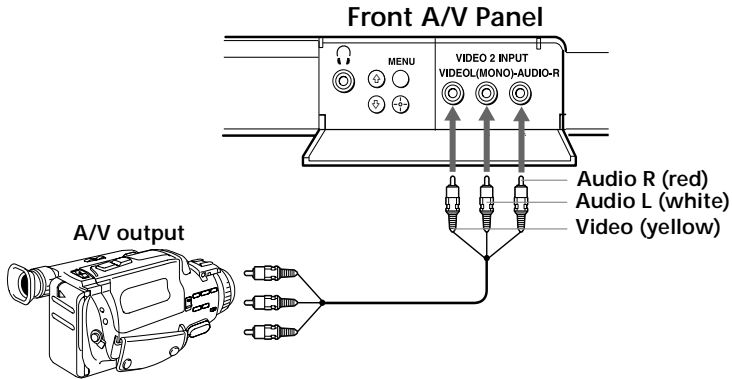


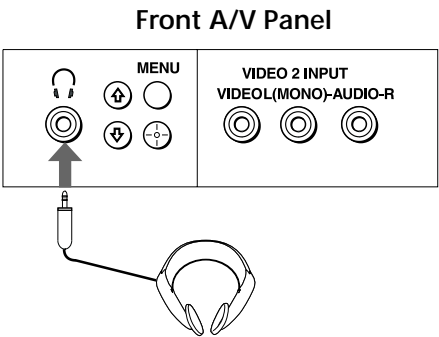
## Connecting a DVD Player

Using Audio/Video cables (not supplied), connect AUDIO and VIDEO OUT on your DVD player to AUDIO and VIDEO IN on your TV.

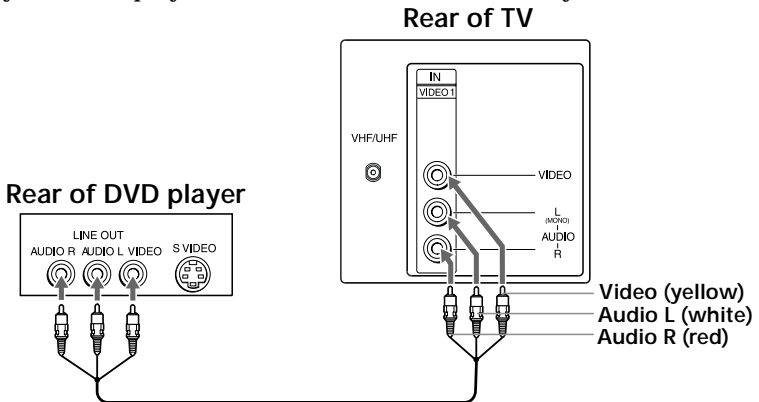

## Connecting Headphones


Connect the headphones to the  jack on the front of your TV.





# Using the Remote Control and Basic Functions


 
This section shows you how to use the more advanced buttons on the remote control and how to use the on-screen menus.

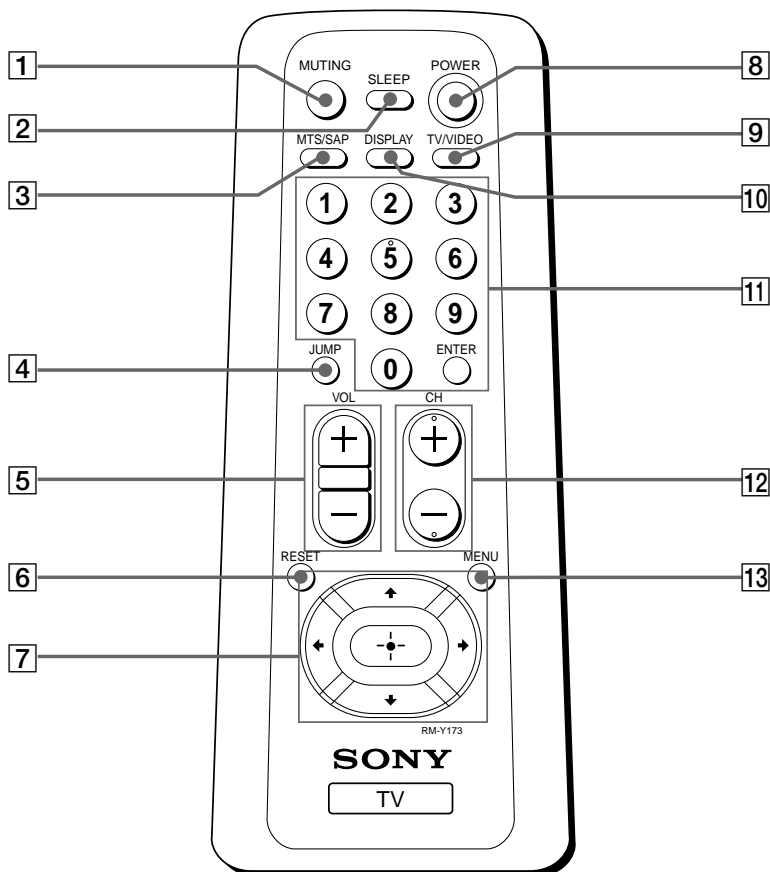


The remote control shown (RM-Y173) is for KV-20FS12. For KV-13FM12 models, your remote control does not have the MTS button.



## Using the Remote Control


Button	Description
<b>1 MUTING</b>	Instantly turns off the sound. Press again or press  to restore sound.
<b>2 SLEEP</b>	Turns the TV off automatically in approximately 15, 30, 45, 60, or 90 minutes. Cancel by pressing until SLEEP OFF appears.
<b>3 MTS/SAP</b>	Cycles through the Multi-channel TV Sound (MTS) options: Stereo, Mono, and Auto-SAP (Second Audio Programming).
<b>4 JUMP</b>	Alternates between the last two channels selected with the <b>0-9</b> buttons.
<b>5 VOL (volume)</b>	Press when you want to adjust the volume.
<b>6 RESET</b>	Press to return to factory settings while in an on-screen menu.
<b>7</b> 	Moves the cursor in the on-screen menus. Press the arrow buttons to move the cursor, press the center button to select or access an option.
<b>8 POWER</b>	Press when you want to turn the TV on and off.
<b>9 TV/VIDEO</b>	Cycles through available video inputs.
<b>10 DISPLAY</b>	Press to display the current time, (if set) and channel number. Press again to turn DISPLAY off.
<b>11 0-9 and ENTER</b>	Change channels directly, and enter numerical values in on-screen displays.
<b>12 CH (channel)</b>	Press when you want to change channels.
<b>13 MENU</b>	Displays the on-screen menu. Press again to exit the menu at any time.


 
 If you lose your remote control, see page 32.


## Setting Up the TV Automatically

After you have finished connecting your TV, you can perform Auto Program to set up your channels.



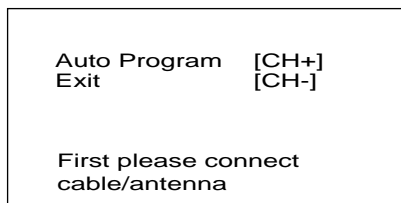








- 1 Press  to turn on the TV. The Initial Setup screen appears.





- 2 Press  on the remote control or in the TV front panel to perform Auto Program or press  to exit.

 The Initial Setup screen appears each time you turn on the TV until you perform Auto Program.










 






































### To perform Auto Program again

- 1 Press .
- 2 Press  to highlight Setup (  ).
- 3 Press  to highlight Options. Press  to select.
- 4 Press  to select Cable.
- 5 Press  or  to select ON or OFF according to how you connected your TV. Press .
- 6 Press  to highlight Auto Program. Press  to search for channels.

 After performing Auto Program, press  to exit.

## Quick Start to the Menus


The following settings are available in your on-screen menus:

Menu	Allows you to
      <p>Video</p> <p>Picture</p> <p>Brightness</p> <p>Color</p> <p>Hue</p> <p>Sharpness</p> <p>VM: Low</p> <p>Move     Select  End </p>	Make adjustments to your picture settings.
      <p>Audio</p> <p>MTS: Stereo</p> <p>Move     Select  End </p>	Change your Multi-channel TV Sound settings.
      <p>Channel Setup</p> <p>Favorite Channel</p> <p>Channel Fix: OFF</p> <p>Channel Skip/Add</p> <p>Channel Label</p> <p>Move     Select  End </p>	Customize your channel settings.
      <p>Parental Control</p> <p>Password: █ _ _ _</p> <p>Move     Select  End </p>	Set rating limits on your TV based on a program's rating or content.




The menus shown in this manual are for KV-20FS12. Your menus may not look like those illustrated.

## Menu

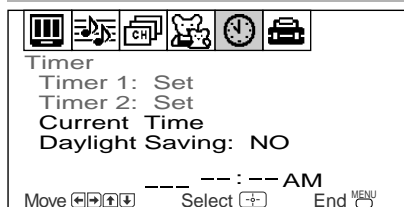


## Allows you to

Set the clock on your TV and program scheduled viewing using Timer 1 and Timer 2.

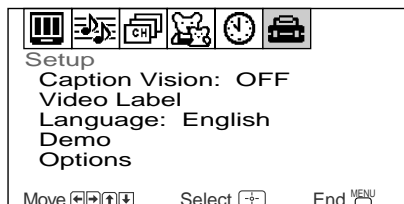

Program your channels, label video inputs, select menu languages, or run a demo of the menus.

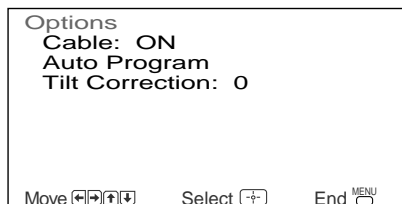




 

 



The Options menu offers other setup options.

# Using the Menus


This section shows the options available for setting up and adjusting your TV.

## To access a menu

- 1 Press  to display the on-screen menu.
- 2 Use the  or  buttons to highlight the desired menu, then press .
- 3 Use the  or  buttons to highlight the desired option, then press .
- 4 Press  to complete the adjustment.
- 5 Press  to exit the menu.

# Using the Video Menu

To access the Video menu, refer to the following steps:

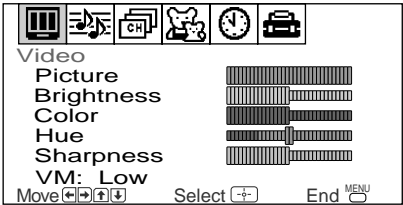

Item	Press ⇐ to	Press ⇒ to
Picture	Decrease picture contrast	Increase picture contrast
Brightness	Darken the picture	Brighten the picture
Color	Decrease color saturation	Increase color saturation
Hue	Increase the red tones	Increase the green tones
Sharpness	Soften the picture	Sharpen the picture
VM Velocity Modulation	Sharpens picture definition to give objects a sharp, clean edge. Use the ⇕ or ⇓ buttons to select from one of the following options: <b>OFF</b> , <b>High</b> , <b>Low</b> (KV-20FS12 only).	

## Using the Audio Menu (KV-20FS12 only)

To access the Audio menu, refer to the following steps:

To Display



To Highlight 





To Select



### MTS

*Multi-Channel  
Sound*

Press  or  to select one of the following options:

**Stereo:** Select when viewing a broadcast in stereo.

 
**Mono:** Select to reduce noise in areas of poor reception.

**Auto-SAP:** Select to have the TV automatically to a Second Audio Program (SAP) when a signal is received.



If your TV is set to Auto-SAP, some programs may be muted or distorted. If your TV does not output sound, change your Audio setting to Stereo or Mono.



Press  for direct MTS settings (Stereo, Mono, Auto-SAP).

## Using the Channel Setup Menu




 
 

 
 
 


To access the Channel Setup menu, refer to the following steps:








### **Favorite Channel**

  *Quick access to favorite channels*

With the Favorite Channel menu open:

- 1 Press  to select.
- 2 Use the  or  buttons to select Auto or Manual (selecting Auto will display in gray the last five channels accessed by the  buttons).
- 3 When in Manual, press  then  to select the position (1-5) where you want to set a favorite channel. Then press .
- 4 Using the  or  buttons, select the desired channel.
- 5 Press  then , the TV will change to the channel entered.

 To use Favorite Channel: Exit all menus and press . Press  or  to move the cursor to the desired channel number and press .

### **Channel Fix**

**2-6:** Select when you want to control all channel selection through a cable box or VCR. Select the appropriate channel (usually 3 or 4) and use the cable box's or VCR's remote control for channel selection.

**Video:** Select from available video inputs when you have connected video equipment (e.g. satellite receiver) and you want your TV fixed to it.

**OFF:** Channel Fix is not set.



<b>Channel Skip/Add</b>	<p>Use this feature after you run Auto Program to skip unwanted channels or add new ones.</p> <ol style="list-style-type: none"> <li>1 Use the <b>0-9</b> buttons or the [CH +/-] buttons to select the channel, then press <b>+</b>.</li> <li>2 Press <b>+</b> to Skip or Add (only one option will be available).</li> </ol>
<b>Channel Label</b> <i>Label up to 40 channels with their call letters</i>	<p>With the Channel Label window open:</p> <ol style="list-style-type: none"> <li>1 Press <b>+</b>, then press <b>↑</b> or <b>↓</b> until you reach the desired channel number.</li> <li>2 Press <b>+</b> to activate the channel.</li> <li>3 Press <b>↑</b> or <b>↓</b> to display the first call letter or number of the caption and press <b>+</b> to select it. When finished, press <b>+</b> to activate.</li> </ol>



Favorite Channel, Channel Skip/Add, and Channel Label cannot be used when Channel Fix is set.

# Parental Control


The Parental Control feature is designed to help parents monitor what their children watch on television. This section shows you the different rating systems available and how to set your TV's rating limit.

## Overview of the Ratings


Once you have become familiar with these rating systems, you should be ready to set your TV's rating limit.

## TV Ratings

The TV ratings are divided into two groups: age-based and content-based.

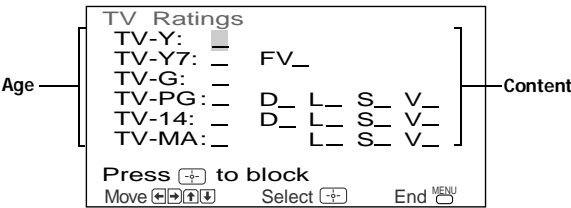

Age	Defined as	Contents	Defined as
TV-Y	All children	FV	Fantasy Violence
TV-Y7	Directed to older children	D	Suggestive dialogue
TV-G	General audience	L	Strong language
TV-PG	Parental Guidance suggested	S	Sexual situations
TV-14	Parents Strongly cautioned	V	Violence
TV-MA	Mature Audience only		

 The content ratings will increase depending on the level of the age-based rating. For example, a program with a TV-PG V (Violence) rating may contain moderate violence, while a TV-14 V (Violence) rating may contain intense violence.

## Movie Ratings

### (U.S. models only)

This system defines the rating levels of movies shown in theaters and on prime cable channels.

Rating	Defined as
<b>G</b>	General audience
<b>PG</b>	Parental Guidance suggested
<b>PG-13</b>	Parents strongly cautioned
<b>R</b>	Restricted
<b>NC-17</b>	No one 17 and under admitted
<b>X</b>	Adult audience only

Movie Rating  
G: ☒  
PG: ☐  
PG-13: ☐  
R: ☐  
NC-17: ☐  
X: ☐  
Press  to block  
Move        Select     End

## Unrated

### (U.S. models only)

You have the option of blocking TV programs or movies that are not rated.

<b>View All</b>	Allows all unrated programs
<b>Block All</b>	Blocks all unrated programming
<b>Block TV</b>	Blocks all unrated TV Programs
<b>Block Movies</b>	Blocks all unrated movies

Custom Ratings  
  
TV Ratings  
Movie Ratings  
Unrated: View All  
  
Select Category  
Move        Select     End




If you choose to block unrated TV programs, please be aware that the following programs may be blocked: emergency broadcasts, political programs, sports, news, public service announcements, religious programs, and weather.

## English Ratings

(Canadian models only)

These ratings are for Canadian programs that are broadcast in English.

Rating	Defined as
<b>C</b>	Children
<b>C8+</b>	Children 8 years and older
<b>G</b>	General programming
<b>PG</b>	Parental Guidance
<b>14+</b>	Viewers 14 and older
<b>18+</b>	Adult programming

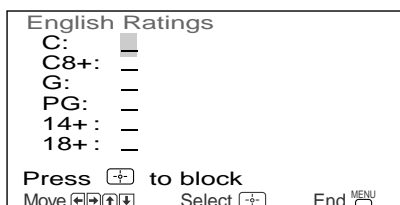


## French Ratings

(Canadian models only)

These ratings are for Canadian programs that are broadcast in French.

Rating	Defined as
<b>G</b>	General
<b>8 ans+</b>	Not recommended for younger children
<b>13 ans+</b>	Not recommended for children under age 13
<b>16 ans+</b>	Not recommended for ages under 16
<b>18 ans+</b>	This program is restricted to adults

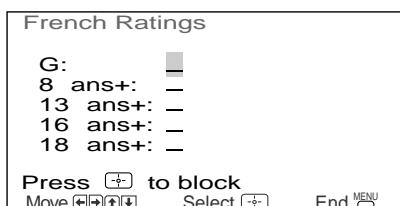

## U.S.A. Ratings


(Canadian models only)

For programs from the United States. Please see “TV Ratings” on page 22.


## Using the Parental Control Menu

To access the Parental Control menu, refer to the following steps:



In the Parental Control  menu, you will be asked to set a 4-digit password for any further access into Parental Control.

- 1 Press **+**, then use the **0-9** buttons to enter a 4-digit password.

 Keep this manual in a safe place. If you forget your password, see page 32.


- 2 Confirm your password by entering it again.

Once your password is set correctly, the next Parental Control menu appears.

## Setting the rating

You can change the Rating by selecting one of the Lock options.



- 1 Move the cursor to Lock and press .

If you are not familiar with the Parental Guidelines rating system, use one of the following preselected categories to simplify the rating selections, Child, Youth, Young Adult.

- 2 Use the  or  buttons to select the desired rating and press .

Rating	TV will allow a maximum rating of:
<b>Child</b>	TV-Y, TV-G, G (U.S. models only), G (Canadian models only)
<b>Youth</b>	TV-PG, PG (U.S. models only), PG (Canadian models only)
<b>Young Adult</b>	TV-14, PG-13 (U.S. models only), 14+ (Canadian models only)
<b>Custom</b>	Select to set more restrictive ratings, (see next section)
<b>OFF</b>	No rating limit

## Using the Custom menu




Before setting Custom ratings, see page 22-24, “Overview of the Ratings,” for a description of the available rating systems.

Follow the instructions on the screen to make your custom settings. See page 23 for U.S. models and page 24 for Canadian models for more information.



Once you have blocked a rating or content, all higher ratings or content will be automatically blocked.

## Changing your Password

- 1 Use the  or  buttons to move the cursor to Change Password and press .
- 2 Follow steps 1 and 2 for “Using the Parental Control menu” on page 25.

## Information for Parents

### To view a program that exceeds the TV rating

- Press  <sup>ENTER</sup>, then use the - buttons to enter your password.



Entering your password to view a blocked program will temporarily turn Lock to OFF. To reactivate your Lock settings, turn the TV off then back on. The TV will return to the settings that you have selected.

## Using the Timer ⌚ Menu

To access the Timer menu, refer to the following steps:


To Display



To Highlight ⌚



To Select

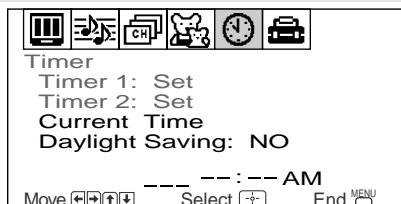

### Current Time

- 1 Press  $\uparrow$  or  $\downarrow$  to select the current time, then press  $\rightarrow$ .  
(If you are in Daylight Saving time, be sure to set the Daylight Saving mode in "YES")
- 2 Press  $\uparrow$  or  $\downarrow$  to enter the correct time, then press  $\rightarrow$ .
- 3 Press  $\bigcirc$  to exit the menu.

### Timer 1 and Timer 2 Scheduled viewing

- With the menu open, set cursor on Timer 1 or Timer 2:
- 1 Press  $\uparrow$  or  $\downarrow$  to select Timer 1 or Timer 2, then press  $\rightarrow$ .
  - 2 Press  $\uparrow$  or  $\downarrow$  to enter your time and channel of preference, then press  $\rightarrow$ .
  - 3 Press  $\bigcirc$  to exit the menu.



You must set the Current Time before you can use Timer 1 and Timer 2.



You can set the Timer to ON, OFF, or Set. Once the timer is set, you can turn it on or off without having to go through the settings.

### Daylight Saving

**YES:** Select in spring to compensate for Daylight Saving.  
**NO:** Select in fall at the end of Daylight Saving.



When you perform Auto Program, all Timer 1 and Timer 2 settings will be cleared.



Any loss of power will cause Current Time, Timer 1 and Timer 2 settings to be cleared.



## Using the Setup Menu

To access the Setup menu, refer to the following steps:



<b>Caption Vision</b> <i>Closed-Captioning</i>	<p>Allows you to select from three closed caption modes (for programs that are broadcast with closed caption).</p> <p>Press <math>\uparrow</math> or <math>\downarrow</math> to select one of the following options:</p> <p><b>CC1, 2, 3, 4:</b> Displays printed dialogue and sound effects of a program.</p> <p><b>TXT1, 2, 3, 4:</b> Displays network/station information.</p> <p><b>XDS</b> (Extended Data Services): Displays information about the network and current program, if available.</p> <p><b>OFF:</b> Caption vision is not activated.</p>
<b>Video Label</b> <i>Label connected equipment</i>	<p>With the Video Label window open:</p> <ol style="list-style-type: none"> <li>1 Press <math>\uparrow</math> or <math>\downarrow</math> to access the input you want to label and press <math>\rightarrow</math>.</li> <li>2 Press <math>\uparrow</math> or <math>\downarrow</math> to choose a label and press <math>\rightarrow</math>.</li> </ol>
<b>Language</b>	<p>Display all menus in your language of choice.</p> <p>Use the <math>\uparrow</math> or <math>\downarrow</math> buttons to select desired language and press <math>\rightarrow</math>.</p>
<b>Demo</b>	<p>Press <math>\rightarrow</math> to run a demonstration of the on-screen menus.</p>

## Options Menu

To access the Options menu, first open the Setup menu, then refer to the following steps:


To Display



To Highlight



To Select

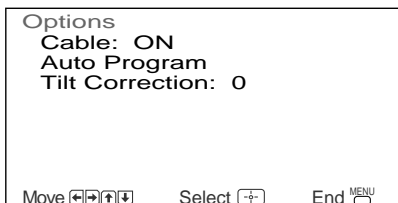

- 
- Cable**      **ON:** Select if you are receiving cable channels with a CATV cable.  
**OFF:** Select if you are using a TV antenna.

After changing your cable settings, you will need to perform Auto Program.


- 
- Auto Program**    Perform Auto Program whenever setting up your TV. It will cycle through all available channels and program receivable channels.




 
 

 

 

- 
- Tilt Correction**    Press or to correct any tilt of the picture from -5 to +5, then press to activate.
-

# Other Information

## Troubleshooting

If you are having a problem with your TV, try the suggestions below. If the problem persists, contact your nearest Sony dealer.

<b>No picture, no sound</b>	<ul style="list-style-type: none"><li>❑ Make sure the power cord is plugged in.</li><li>❑ If a red light is flashing on the front of your TV for more than a few minutes, disconnect and reconnect the power cord to restore the TV. If the problem continues, call your local service center.</li><li>❑ Check the TV/VIDEO settings: when watching TV, set to TV; when watching video equipment, set to VIDEO (page 13).</li><li>❑ Make sure the batteries have been inserted correctly into the remote control (page 2).</li><li>❑ Try another channel, it could be station trouble.</li></ul>
<b>Poor or no picture, good sound</b>	<ul style="list-style-type: none"><li>❑ Adjust Picture in the Video menu (page 18).</li><li>❑ Adjust Brightness in the Video menu (page 18).</li><li>❑ Check the antenna and/or cable connections (page 3).</li></ul>
<b>Good picture, no sound</b>	<ul style="list-style-type: none"><li>❑ Press  so that MUTING disappears from the screen (page 13).</li><li>❑ Check your Audio settings. Your TV may be set to Auto-SAP (page 19).</li></ul>
<b>No color</b>	<ul style="list-style-type: none"><li>❑ Adjust Color in the Video menu (page 18).</li></ul>
<b>Only snow appears on the screen</b>	<ul style="list-style-type: none"><li>❑ Check the Cable setting in the Options menu under Setup (page 30).</li><li>❑ Check the antenna and/or cable connections (page 3).</li><li>❑ Make sure the channel selected is currently broadcasting.</li></ul>
<b>Dotted lines or stripes</b>	<ul style="list-style-type: none"><li>❑ Adjust the antenna.</li><li>❑ Move the TV away from other electronic equipment. Some electronic equipment can create electrical noise, which can interfere with TV reception.</li></ul>
<b>Double images or ghosts</b>	<ul style="list-style-type: none"><li>❑ Check your outdoor antenna or call your cable service.</li></ul>

<b>Cannot receive higher number channels (UHF) when using an antenna</b>	<ul style="list-style-type: none"> <li>❑ Make sure Cable is set to OFF in the Options menu under Setup (page 30).</li> <li>❑ Perform Auto Program to add channels that are not presently in the memory (page 14).</li> </ul>
<b>Cable stations don't seem to work</b>	<ul style="list-style-type: none"> <li>❑ Make sure Cable is set to ON in the Options menu under Setup (page 30).</li> <li>❑ Perform Auto Program to add channels that are not presently in the memory (page 14).</li> </ul>
<b>Remote control does not operate</b>	<ul style="list-style-type: none"> <li>❑ Batteries could be weak. Replace them (page 2).</li> <li>❑ Move the TV 3-4 or more feet away from fluorescent lights.</li> </ul>
<b>The TV needs to be cleaned</b>	<ul style="list-style-type: none"> <li>❑ Clean the TV with a soft dry cloth. Never use strong solvents such as thinner or benzine, which might damage the finish of the cabinet.</li> </ul>
<b>Lost password for Parental Control</b>	<ul style="list-style-type: none"> <li>❑ In the password screen, enter the following master password: 4357. After using the master password, you must create a new password, it cannot be used to unlock currently blocked channels.</li> </ul>
<b>You lost your remote control</b>	<ul style="list-style-type: none"> <li>❑ You can use the front Audio/Video panel controls to access the menu. Press  to open the menu. Use the  and  buttons on the front Audio/Video panel instead of the  and  buttons on the remote control. Use the  button on the front Audio/Video panel instead of the , , and  buttons on the remote control. Press  again when the setting or adjustment is complete. Contact your nearest Sony dealer to order a replacement.</li> </ul>

*If, after reading these Operating Instructions, you have additional questions related to the use of your Sony television, please call our Direct Response Center at 1-800-222-SONY (7669) (U.S. residents only) or (416) 499-SONY (7669) (Canadian residents only).*

## Specifications

### For all models (except as noted)

Television system	American TV standard/NTSC
Channel coverage	VHF: 2-13/UHF: 14-69/CATV: 1-125
Antenna	75-ohm external antenna terminal for VHF/UHF
Picture tube	FD Trinitron® tube
Power requirements	120V, 60 Hz
Supplied Accessories	Size AA (R6) batteries (2) Remote Control RM-Y172 (1) (KV-13FM12, KV-13FM13, KV-13FM14) RM-Y173 (1) (KV-20FS12)
Optional Accessories	Connecting cables VMC-810S/820S, VMC-720M, YC-YC-15V/30V, RK74A EAC-66 U/V mixer

#### KV-13FM12, KV-13FM13, KV-13FM14

Screen size	Visible screen size: 13 inches (341 mm) measured diagonally Actual screen size: 14 inches (356.6 mm) measured diagonally
Inputs/outputs	2 video, 2 audio 1 headphone jack
Speaker output	3 W x 1
Power Consumption	80 W in use 1 W in standby
Dimensions (W/H/D)	450 x 338 x 438 mm (17 <sup>3</sup> / <sub>4</sub> x 13 <sup>3</sup> / <sub>8</sub> x 17 <sup>1</sup> / <sub>4</sub> in.)
Mass	12 kg (26 lbs. 7 oz.)

#### KV-20FS12


Screen size	Visible screen size: 20 inches (507 mm) measured diagonally Actual screen size: 21 inches (533.4 mm) measured diagonally
Inputs/outputs	2 video, 2 audio 1 headphone jack
Speaker output	3 W x 2
Power Consumption	115 W in use 1 W in standby
Dimensions (W/H/D)	512 x 475 x 493 mm (20 <sup>1</sup> / <sub>4</sub> x 18 <sup>3</sup> / <sub>4</sub> x 19 <sup>1</sup> / <sub>2</sub> in.)
Mass	24 kg (52 lbs. 15oz.)

Design and specifications are subject to change without notice.



# Index


## A

- Audio  menu 19
- Auto Program 14, 30
- Auto-SAP 19

## B

- Battery Installation 2
- Brightness 18

## C

- Cable 30
- Caption Vision 29
- Channel Fix 20
- Channel Label 21
- Channel Setup  menu 20
- Channel Skip/Add 21
- Color 18
- Connections
  - Cable and antenna 3
  - Connecting a Camcorder 9
  - Connecting a DVD player 9
  - Connecting Headphones 10
  - TV and Cable Box 5
  - TV and VCR 4
  - TV and Satellite Receiver 7
  - TV, Satellite Receiver, and VCR 8
  - TV, VCR, and Cable box 6
- Current Time 28

## D

- Daylight Saving 28
- Demo 29
- DISPLAY 13

## F

- Favorite Channel 20

## H







- Hue 18

## L

- Language 29

## M

### Menus

- Audio  19
- Channel Setup  20
- Parental Control  25
- Setup  29
- Timer  28
- Video  18


### MTS

- Auto-SAP 19
- Stereo 19
- Mono 19

## O

- Options (Setup) 30


## P

- Parental Control  Menu 25
- Picture 18


## R

- Remote Control 13


## S

- Setup  menu 29
- Sharpness 18
- SLEEP 13
- Specifications 33

## T

- Timer  menu 28
- Timer 1 and Timer 2 28
- Troubleshooting 31
- TV Features 1
- Tilt Correction 30

## V

- Video  menu 18
- Video Label 29
- VM 18

